Product Installation



Main Unit Charging



*Please fully charge the unit before the first use.

Product Introduction

Electronic lock: long press the button for 1.5 seconds to switch the working modes

Reset Filter element:

. First, press the button for 3 seconds to enter the Menu, click the button to select "Filter Element Reset", press for 3 seconds to enter the "Filter Element Reset" interface, then press it for 3 seconds to confirm the setting.



Electric power monitoring ring:

- . Super: Red
- . Strong: Blue . Power Saving: Green

Battery small icon:

- . White>20% . Red <20% . Red flicker<10%

Shift gear:

. Click the button to switch to Power Saving, Strong, or Super mode

Language Settings:

Press the button for 3 seconds to enter the Menu, click to select "Language Selection", press the button for 3 seconds to enter the "Language" interface, click to select your language, and then press for 3 seconds to complete the setting.

Mode 1: discontinuous operation mode

Press the host trigger to start working, release the trigger to stop the operation immediately.



Mode 2: continuous operation mode

Mode 2: continuous operation mode
In standby mode, long press "O" for 1.5
seconds to turn on the continuous
working mode, then "O" will appear on
the screen, and press the button for 1.5
seconds again to turn off the continuous
working mode. The use of continuous
operation mode can free your fingers
and avoid fatigue of the constant
pressing on the trigger






. Under the running state of this mode, it can be suspended or started again by short pressing the trigger, and the working mode of the machine unchanged.


If you need to launch the continuous working mode, long press the "O" key.

Maintenance tips

The following figures are marked as washable parts. If cleaning mission is needed, please detach them from the main machine firstly.

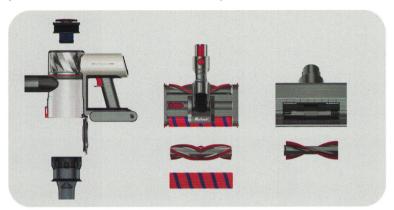

Please dry the parts thoroughly after washing before use!

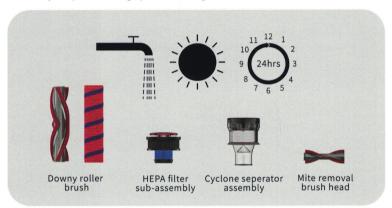

Warning: Except for the above washable parts, the main engine and other parts are not washable. Please wipe them with a dry duster or cloth.

Matters needing attention

Please check the area to be cleaned before use and preclude the easily inhalable obstructions in advance to prevent the twining of the rolling brush or the blockage of the air duct from affecting the normal use of the product.

